

[Power] Switch  
This switch turns the power on/off.

[Volume] Knob  
This knob adjusts the volume.



[Reverb] Knob  
This knob adjusts the depth of the reverberation.

[Tone] Knob  
This knob adjusts the tonal character.

Sound Select Buttons  
These buttons select sounds.

[Function] Button  
Use this button in conjunction with the Sound Select buttons or the [Temperament] button.

[Temperament] Button/Indicators  
Press this button to switch temperaments. The indicator for the selected temperament will light.